


EVACUATION DIAGRAM

VOLKSWAGEN GROUP AUST. 179 STUDLEY COURT, DERRIMUT. 3030

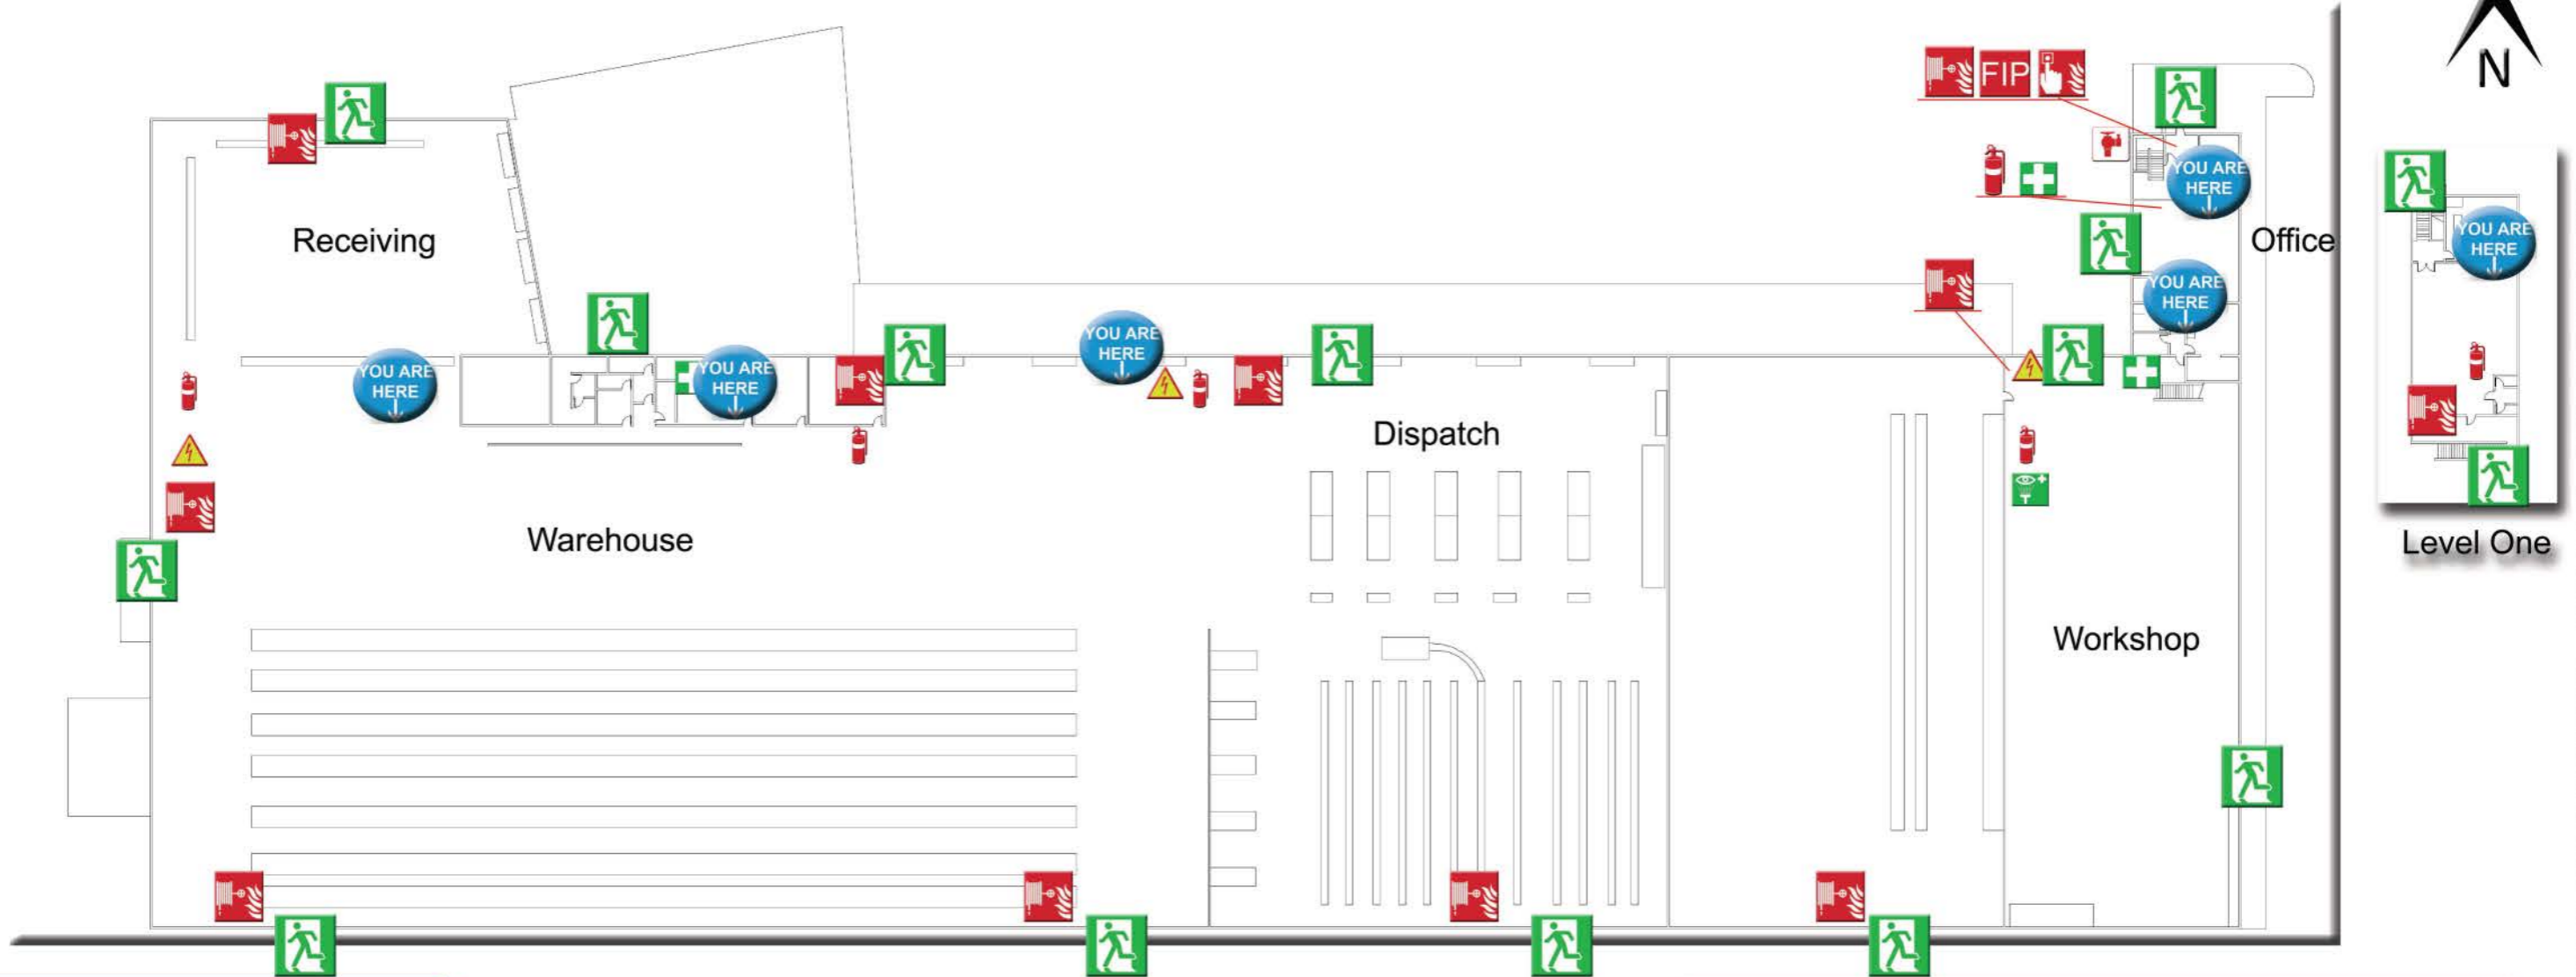

FIRE EMERGENCY

R REMOVE PEOPLE FROM IMMEDIATE DANGER AREA
Safety to self, scene and survivors in that order

A ALERT ALL OCCUPANTS AND RAISE AN ALARM
DIAL 000 - Ask for the Fire Brigade

C CONFINE THE SMOKE / FIRE CLOSE DOOR + WINDOWS
Restrict the spread of the fire, attempt to extinguish the fire if trained and safe to do so

E EVACUATE TO A SAFE AREA AND WAIT FOR ASSISTANCE
Evacuate the building via the nearest safe exit door, Once outstay out and wait for assistance from the responding emergency services

LEGEND

- DCP Extinguisher
- Fire Hydrant
- Eye Wash
- Hose Reel
- First Aid
- Switch Board
- Fire Panel
- Egress
- You Are Here
- Call Point
- Exit
- Fire Blanket
- Assembly



Tel: 1300 88 55 30 www.fsasus.com.au

